



1

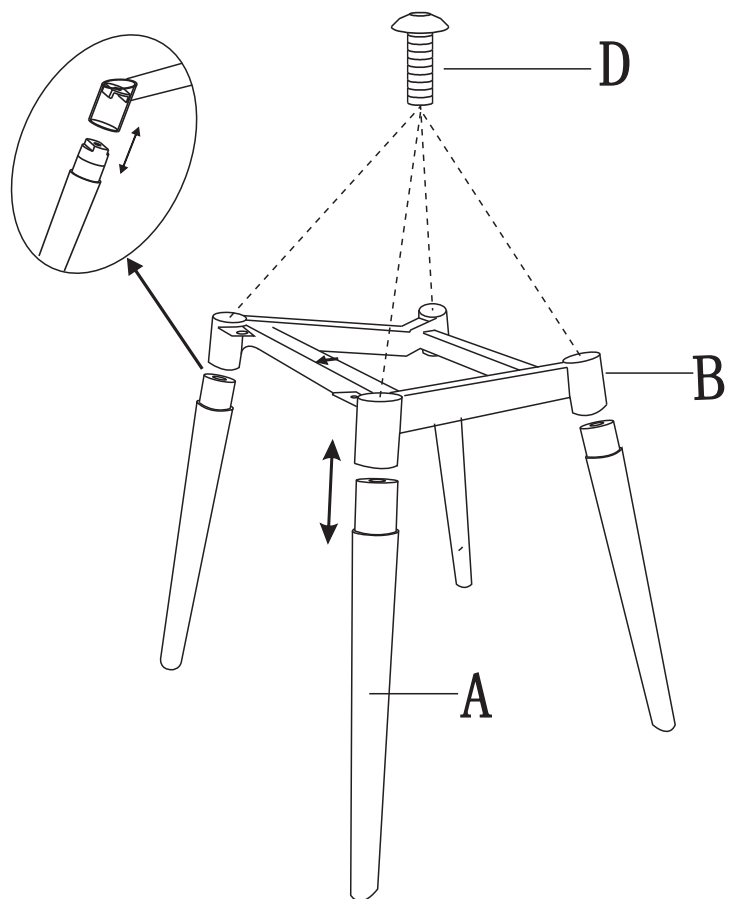


Put the wooden leg into iron frame in same direction, tighten the screw after leg stick close to frame.

2

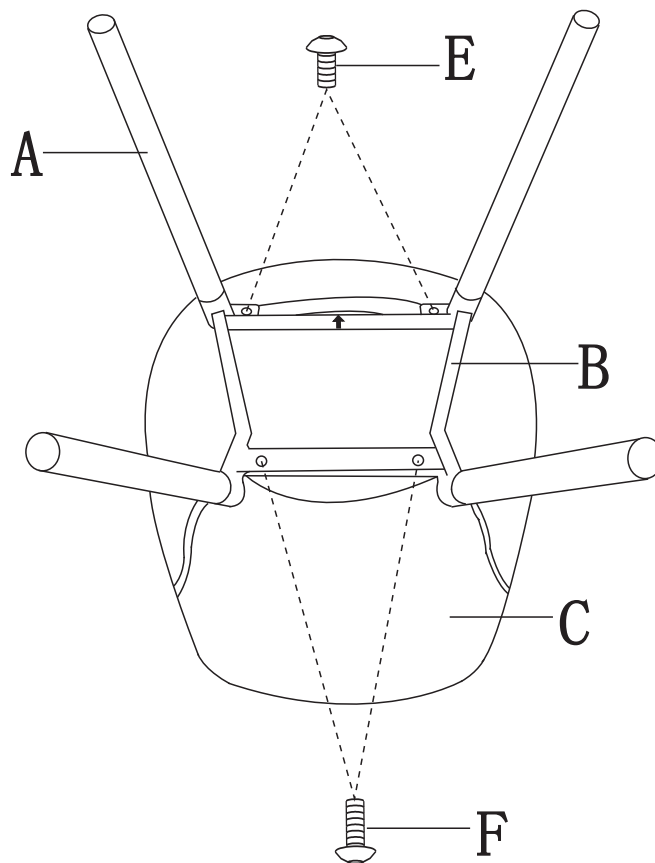

3

7-02M

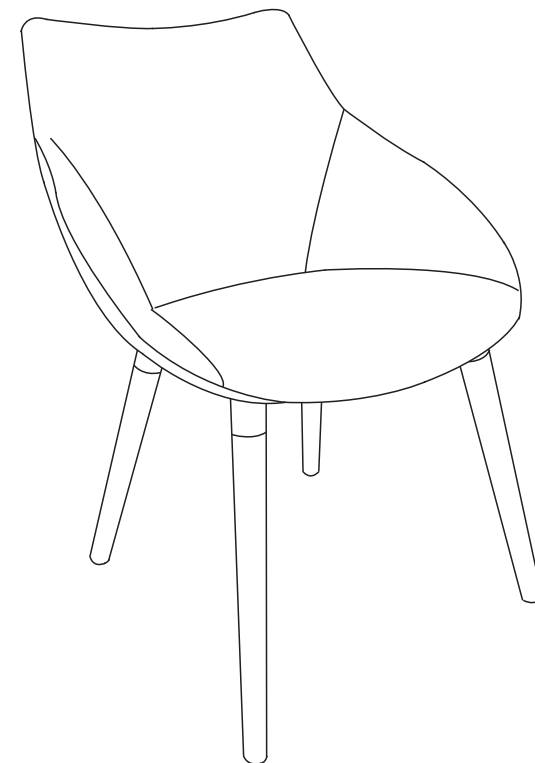

D 

M6\*40/4PCS

E 

M6\*14/2PCS

F 

M6\*30/2PCS

G 

M5/1PC