










Spare parts list :


Numbers	Picture	Quantity
①		1
②		4
③		1
④		4

Numbers	Picture	Quantity	Extra
⑤	 M6X20	4	1
⑥	 M6X35	8	1
⑦		8	1
⑧		8	1



4mm X1

P&W-009-3

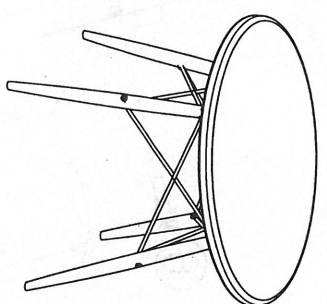


Assembly instruction

1


! Attention! Keep the metal plate direction the same as shown.

1、First, please insert the metal plate to the wooden legs as the picture direction, then install the screws.

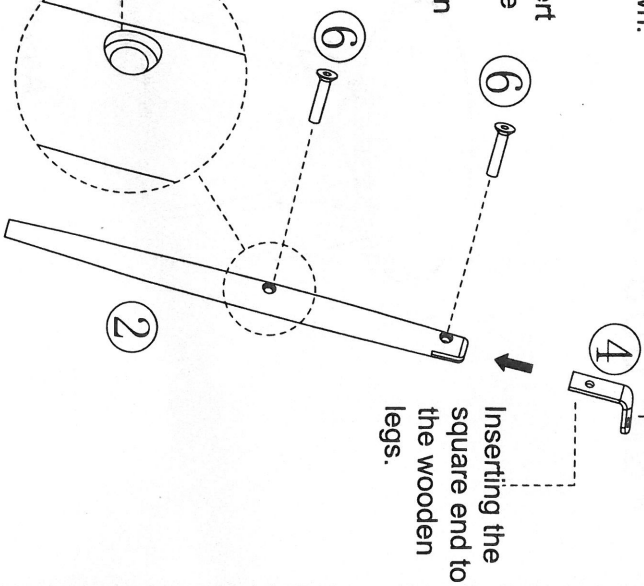


2

2、 Assemble the wooden leg and steel frame.

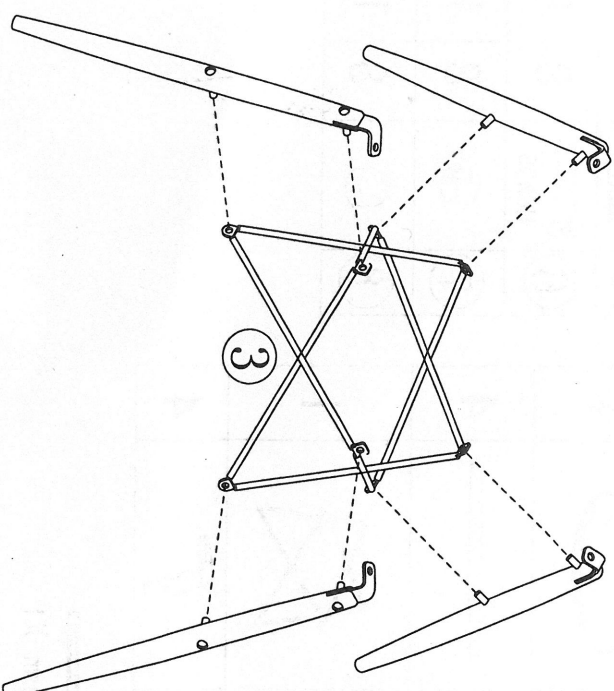


3

3、Tightening the screws with the nuts.

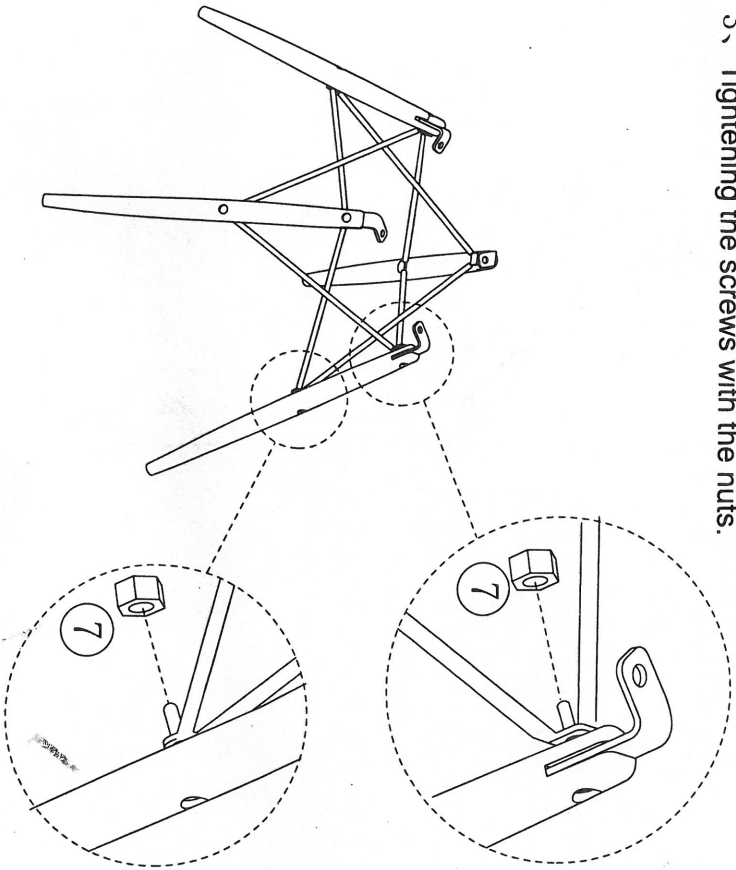

4

4、Assemble the under plates and frame .

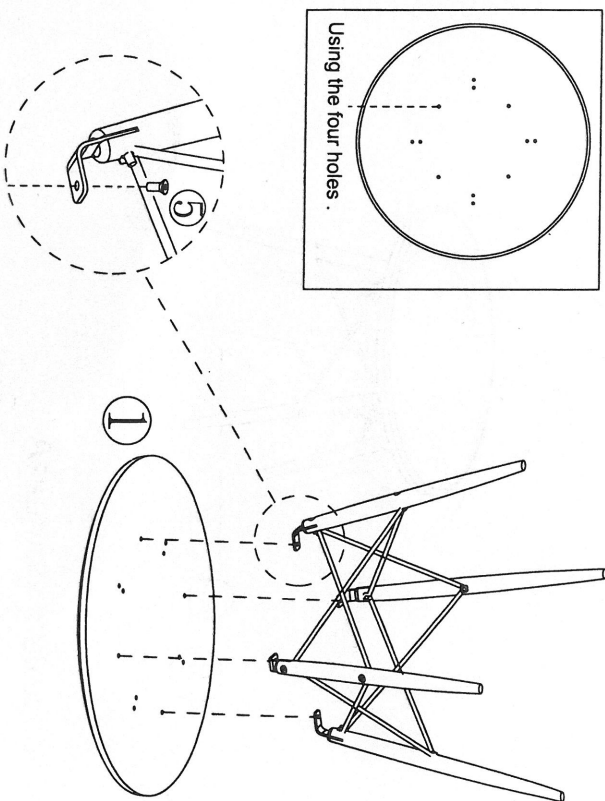

5

5、Cover the nuts with cap.

